

# X-Terminal Installation for Remote Display Manager and FoxView™

# 8.0





---

# X-Terminal Installation for Remote Display Manager and FoxView™

Version 8.0 / Date: April 20, 2001  
Copyright 1994-2001 / Foxboro

R. Deen - Foxboro Field Installation Group  
Baarn / The Netherlands  
[rdeen@foxboro.com](mailto:rdeen@foxboro.com)

3Com, Etherlink, Etherdisk are registered trademarks of 3Com Corporation.  
Foxboro, Fox, I/A Series, FoxView, FoxDraw are registered trademarks of the Foxboro Company.  
eXceed is a registered trademark of Hummingbird Communications Ltd.  
Ethernet is a registered trademark of Xerox Corporation.  
MS-Windows (95,98,NT,2000) are registered trademarks of Microsoft Corporation.  
NetWare is a registered trademark of Novell Corporation.  
SUN, PC-NFS, SunSoft, Solarnet are registered trademarks of Sun Microsystems, Inc.  
X Window is a registered trademark of X Consortium, Inc.  
XVision is a registered trademark of Visionware Limited a subsidiary of the Santa Cruz Operation, Inc.  
Reflection X is a trademark of WRQ, Inc.



## Table of Contents:

<b>1</b>	<b>INTRODUCTION.....</b>	<b>1-9</b>
1.1	ABOUT THIS DOCUMENT. ....	1-11
1.2	TO DO LIST. ....	1-11
1.3	DISCLAIMER. ....	1-11
1.4	ACKNOWLEDEMENTS.....	1-11
1.5	HOW THIS DOCUMENT IS ORGANIZED.....	1-12
1.6	SYSTEM REQUIREMENTS.....	1-12
1.7	SUN X-TERMINALS.....	1-12
1.8	READ ME... (RELATED INFORMATION AND DOCUMENTS).....	1-12
1.8.1	<i>About IP configuration.....</i>	<i>1-12</i>
1.8.2	<i>Foxboro Documentation.....</i>	<i>1-14</i>
1.9	CONVENTIONS.....	1-14
1.10	REVISION HISTORY.....	1-15
<b>2</b>	<b>QUICK START.....</b>	<b>2-17</b>
2.1	INTRODUCTION.....	2-19
2.2	THE "IA" ACCOUNT.....	2-19
2.3	THE HOST.....	2-19
2.3.1	<i>Network hardware.....</i>	<i>2-19</i>
2.3.2	<i>DM/FoxView™ license.....</i>	<i>2-19</i>
2.3.3	<i>DM/Foxview™ configuration.....</i>	<i>2-20</i>
2.3.4	<i>The "Go_dm" and "/.profile" files.....</i>	<i>2-20</i>
2.3.5	<i>Xterminal tuning.....</i>	<i>2-20</i>
2.4	THE X-TERMINAL.....	2-21
<b>3</b>	<b>THE NETWORK HARDWARE AND SOFTWARE.....</b>	<b>3-23</b>
3.1	INTRODUCTION.....	3-25
3.2	INSTALLING THE SBUS/PCI ETHERNET CARD.....	3-25
3.2.1	<i>SBus: The AUI / Ethernet card. (Foxboro partno: P0970PX).....</i>	<i>3-27</i>
3.2.2	<i>SBus: Fast SCSI / UTP (10Mbps) Ethernet. (Foxboro partno: P0971BJ).....</i>	<i>3-28</i>
3.2.3	<i>SBus: Fast SCSI / UTP 10/100 Mbps Ethernet I/F Card. (Foxboro partno: P0971SD).....</i>	<i>3-28</i>
3.2.4	<i>PCI: UW-SCSI / UTP 10/100 Mbps Ethernet. (Foxboro partno: P0971UC).....</i>	<i>3-28</i>
3.2.5	<i>PCI: UTP 10/100 Mbps Ethernet with MII Connector. (Foxboro partno: P0971UE or P0971UF).....</i>	<i>3-29</i>
3.3	DETERMINE CURRENT CONFIGURATION OF THE INSTALLED SBUS CARDS.....	3-30
3.4	THE PC NETWORK INTERFACE CARD.....	3-30
3.4.1	<i>The 3Com Etherlink II.....</i>	<i>3-31</i>
3.4.2	<i>The 3Com Etherlink III.....</i>	<i>3-33</i>
3.4.3	<i>The 3Com Etherlink III with Windows NT 4.0.....</i>	<i>3-35</i>
3.4.4	<i>3Com Etherlink XL Combo.....</i>	<i>3-36</i>
3.5	THE TCP/IP PROTOCOL.....	3-38
3.5.1	<i>TCP/IP for Windows 3.x and Windows for Workgroups.....</i>	<i>3-39</i>
3.5.2	<i>TCP/IP for Windows 95 and 98.....</i>	<i>3-39</i>
3.5.3	<i>TCP/IP for Windows NT 4.0.....</i>	<i>3-40</i>
3.5.4	<i>TCP/IP for Windows 2000 Professional.....</i>	<i>3-43</i>
3.6	TESTING THE SETUP.....	3-46
<b>4</b>	<b>I/A SERIES PREPARATION.....</b>	<b>4-49</b>
4.1	INTRODUCTION.....	4-51
4.2	THE /ETC/HOSTS FILE.....	4-51
4.3	THE HOSTNAME.LEX / HOSTNAME.HMEX FILE.....	4-52
4.4	THE DISPLAY MANAGER CONFIGURATION (DMCFG) FILE.....	4-52
4.4.1	<i>The Display Manager Configuration with I/A Series software V4.2.x. and later.....</i>	<i>4-52</i>
4.5	REBOOTING THE STATIONS.....	4-53
4.6	SETTING UP A WORKING ENVIRONMENT.....	4-53
4.6.1	<i>With the Foxboro DM and FoxView™.....</i>	<i>4-53</i>

4.6.2	The "ia" account.....	4-54
4.6.3	The .profile / go_dm files.....	4-55
4.6.4	More than one DM on one X-terminal.....	4-60
4.6.5	Setting "root" privileges for the "ia" account.....	4-60
4.7	ALARM MANAGER REMOTE ACCESS (THE am_cmds FILE).....	4-61
4.8	LIMITING ACCESS WITHIN A DISPLAY MANAGER OR ALARM MANAGER.....	4-62
4.9	PULL-DOWN MENU ACCESS CONTROL.....	4-65
4.9.1	The .pulldown File.....	4-65
4.9.2	Examples.....	4-65
<b>5</b>	<b>EXCEED 5 FOR WINDOWS 3.XX.....</b>	<b>5-67</b>
5.1	INTRODUCTION.....	5-69
5.2	HARDWARE REQUIREMENTS.....	5-69
5.3	SOFTWARE REQUIREMENTS.....	5-69
5.4	ADDITIONAL REQUIREMENTS AND YEAR 2000 ISSUES.....	5-69
5.5	INSTALLING EXCEED VERSION 5.....	5-69
5.6	CONFIGURING HUMMINGBIRD TCP/IP.....	5-72
5.7	SYSTEM FILES AFTER EXCEED INSTALLATION.....	5-75
5.8	THE EXCEED HOSTS FILE.....	5-76
5.9	TESTING THE COMMUNICATION.....	5-77
5.10	COPYING THE I/A FONTS TO THE PC.....	5-77
5.11	CONVERTING THE I/A FONTS ON THE PC.....	5-79
5.12	CHANGING PERFORMANCE SETTINGS.....	5-80
5.13	STARTING THE X-TERMINAL.....	5-81
5.14	THE CLIENT STARTUP.....	5-82
<b>6</b>	<b>EXCEED 5 FOR WINDOWS 95.....</b>	<b>6-85</b>
6.1	INTRODUCTION.....	6-87
6.2	HARDWARE REQUIREMENTS.....	6-87
6.3	SOFTWARE REQUIREMENTS.....	6-87
6.4	ADDITIONAL REQUIREMENTS AND YEAR 2000 ISSUES.....	6-87
6.5	CONFIGURATION INFORMATION.....	6-87
6.6	INSTALLING EXCEED 5.1.3.....	6-88
6.7	THE EXCEED HOSTS FILE.....	6-90
6.8	TESTING COMMUNICATION:.....	6-90
6.9	COPYING THE I/A FONTS.....	6-91
6.10	CONVERTING THE I/A FONTS ON THE PC.....	6-92
6.11	CHANGING PERFORMANCE SETTINGS.....	6-94
6.12	STARTING THE X-TERMINAL.....	6-95
<b>7</b>	<b>EXCEED 5 FOR WINDOWS NT.....</b>	<b>7-99</b>
7.1	INTRODUCTION.....	7-101
7.2	HARDWARE REQUIREMENTS.....	7-101
7.3	SOFTWARE REQUIREMENTS.....	7-101
7.4	ADDITIONAL REQUIREMENTS AND YEAR 2000 ISSUES.....	7-101
7.5	CONFIGURATION DATA.....	7-101
7.6	INSTALLING EXCEED 5.1.3.....	7-102
7.7	THE EXCEED HOSTS FILE.....	7-104
7.8	TESTING COMMUNICATION:.....	7-105
7.9	COPYING THE I/A FONTS.....	7-106
7.10	CONVERTING THE I/A FONTS ON THE PC.....	7-107
7.11	CHANGING PERFORMANCE SETTINGS.....	7-109
7.12	STARTING THE X-TERMINAL.....	7-110
<b>8</b>	<b>EXCEED 6 FOR WINDOWS 95/NT.....</b>	<b>8-113</b>
8.1	INTRODUCTION.....	8-115
8.2	HARDWARE REQUIREMENTS.....	8-115
8.3	SOFTWARE REQUIREMENTS.....	8-115
8.4	ADDITIONAL REQUIREMENTS AND YEAR 2000 ISSUES.....	8-115
8.5	TRUE COLOR SUPPORT.....	8-115

8.6	CONFIGURATION INFORMATION.....	8-116
8.7	EXCEED 6 INSTALLATION. ....	8-116
8.8	THE EXCEED HOSTS FILE .....	8-121
8.9	COPYING THE I/A FONTS.....	8-122
8.10	CONVERTING THE I/A FONTS ON THE PC.....	8-124
8.11	CHANGING PERFORMANCE SETTINGS .....	8-125
8.12	STARTING THE X-TERMINAL.....	8-126
<b>9</b>	<b>MULTI HEAD CONFIGURATIONS WITH EXCEED ON WINDOWS NT 4.0.....</b>	<b>9-129</b>
9.1	INTRODUCTION.....	9-131
9.2	HARDWARE REQUIREMENTS.....	9-131
9.3	SOFTWARE REQUIREMENTS.....	9-131
9.4	WINDOWS NT CONSIDERATIONS.....	9-131
9.5	OTHER CONSIDERATIONS.....	9-131
9.6	CONFIGURING EXCEED FOR MULTI SCREEN USE.....	9-131
9.7	THE SPECIAL GO_DM SCRIPT.....	9-133
<b>10</b>	<b>EXCEED 6.2 FOR WINDOWS 2000 PROFESSIONAL.....</b>	<b>10-135</b>
10.1	INTRODUCTION.....	10-137
10.2	HARDWARE REQUIREMENTS.....	10-137
10.3	SOFTWARE REQUIREMENTS.....	10-137
10.4	ADDITIONAL REQUIREMENTS AND YEAR 2000 ISSUES.....	10-137
10.5	TRUE COLOR SUPPORT.....	10-137
10.6	CONFIGURATION INFORMATION.....	10-138
10.7	EXCEED 6 INSTALLATION.....	10-138
10.8	COPYING THE I/A FONTS.....	10-143
10.9	CONVERTING THE I/A FONTS ON THE PC.....	10-144
10.10	CHANGING PERFORMANCE SETTINGS .....	10-146
10.11	STARTING THE X-TERMINAL.....	10-146
<b>11</b>	<b>REFLECTION X 7.7 FOR WINDOWS 2000 PROFESSIONAL.....</b>	<b>11-149</b>
11.1	INTRODUCTION.....	11-151
11.2	HARDWARE REQUIREMENTS.....	11-151
11.3	SOFTWARE REQUIREMENTS.....	11-151
11.4	ADDITIONAL REQUIREMENTS.....	11-151
11.5	CONFIGURATION INFORMATION.....	11-151
11.6	INSTALLING REFLECTION X.....	11-151
11.7	MAKING THE FOXBORO FONTS AVAILABLE ON THE PC X-TERMINAL.....	11-153
11.7.1	<i>Copy the Foxboro fonts to the X-terminal PC.....</i>	<i>11-153</i>
11.7.2	<i>Compiling the Foxboro fonts.....</i>	<i>11-155</i>
11.7.3	<i>Creating the Font alias file (fonts.ali).....</i>	<i>11-156</i>
11.8	X-SERVER CONFIGURATION.....	11-157
11.8.1	<i>Backing store/Save unders.....</i>	<i>11-157</i>
11.8.2	<i>The Foxboro fonts.....</i>	<i>11-158</i>
11.9	CONFIGURING THE X-TERMINAL SESSION.....	11-158
11.10	MAKING THE CONNECTION.....	11-158
<b>12</b>	<b>TROUBLESHOOTING.....</b>	<b>12-161</b>
12.1	INTRODUCTION.....	12-163
12.2	THE FREQUENTLY ANSWERED QUESTIONS!.....	12-163
12.2.1	<i>Ping "hostname" responds with: "unknown host &lt;hostname&gt;".....</i>	<i>12-163</i>
12.2.2	<i>The DM shows up but screen has all the wrong colors.....</i>	<i>12-163</i>
12.2.3	<i>No blinking colors.....</i>	<i>12-164</i>
12.2.4	<i>When the DM/FV window is active the background flickers.....</i>	<i>12-164</i>
12.2.5	<i>Fonts are wrong.....</i>	<i>12-164</i>
12.2.6	<i>After resizing the markers disappear.....</i>	<i>12-164</i>
12.2.7	<i>Minimized/covered application windows do not restore properly.....</i>	<i>12-164</i>
12.2.8	<i>Display Manager/FoxView comes up OK, but disappears after a few seconds.....</i>	<i>12-164</i>
12.2.9	<i>Some characters do not work in VT100 mode.....</i>	<i>12-164</i>
12.2.10	<i>Cannot enter anything in the password space.....</i>	<i>12-165</i>

12.2.11 *Scripts do not work when started from the X-terminal.* ..... 12-165

12.2.12 *No Display Manager Available.....* 12-165

12.2.13 *The message: "No License Available" appears.* ..... 12-165

12.2.14 *Host reply shows: "Cannot execute".....* 12-165

12.2.15 *Made changes to go\_dm, nothing changes.* ..... 12-165

12.2.16 *Can not have more than one DM/FV on a PC.* ..... 12-166

12.2.17 *After several successfull logins, connections are refused.* ..... 12-166

12.2.18 *After installing/upgrading FoxView™ my X-terminals do not behave as before.* . 12-166

12.2.19 *Modifying the colors to display on an X-terminal.....* 12-166

12.2.20 *How to install Exceed V6.1 on Windows Terminal Server (Citrix).....* 12-167

12.2.21 *Cannot ack alarms, mute the horn, etc. on an X-terminal.* ..... 12-168

12.2.22 *Foxview shows a pretty pink/yellow menu background.* ..... 12-168

12.2.23 *Cannot start remote applications.....* 12-168